




GAS HOOK-UP TO THE INTAKE

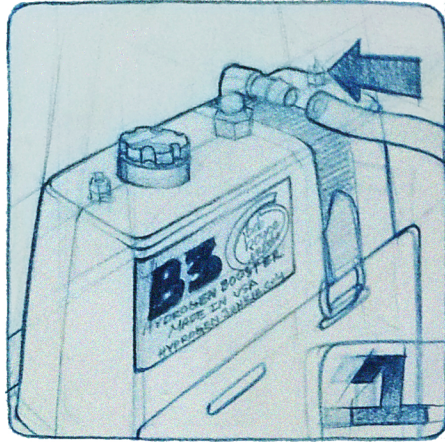

CONNECT SUPPLIED HOSE TO B3 UNIT. CUT TO LENGTH AND ATTACH

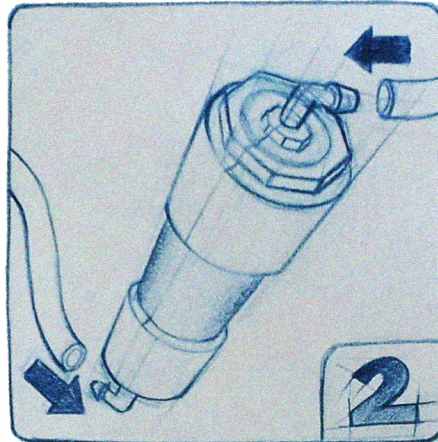


OTHER END TO THE BOTTOM OF THE BUBBLER. CONNECT ANOTHER HOSE FROM

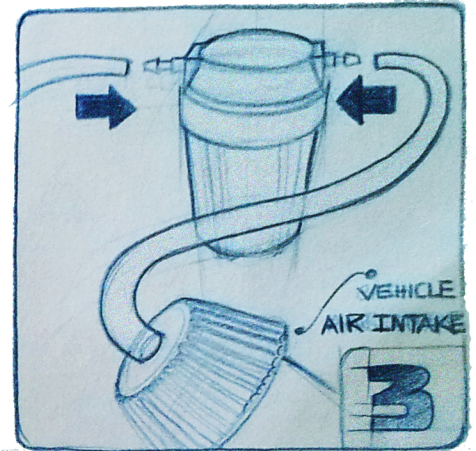


THE TOP OF THE BUBBLER TO THE AIR DRYER. THEN A FINAL ONE FROM THERE TO THE AIR INTAKE.


PWM HOOK-UP

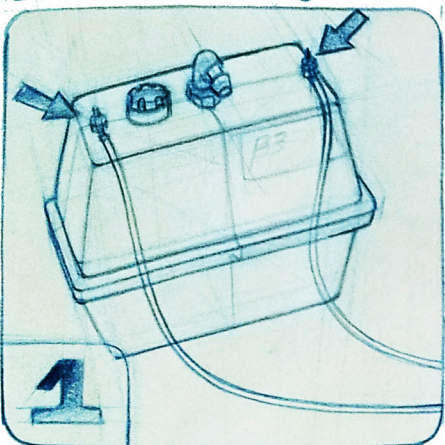

CONNECT CELL \oplus & CELL \ominus WIRES TO THE HYDROGEN CELL FROM THE SUPPLIED PWM UNIT.

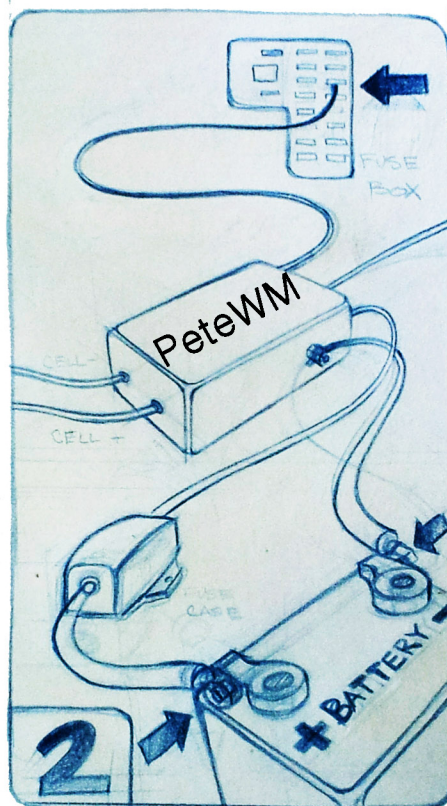

CONNECT THE \ominus GROUND & THE \oplus POWER WIRE FROM THE PWM TO THE BATTERY. CONNECT THE TRIGGER WIRE TO

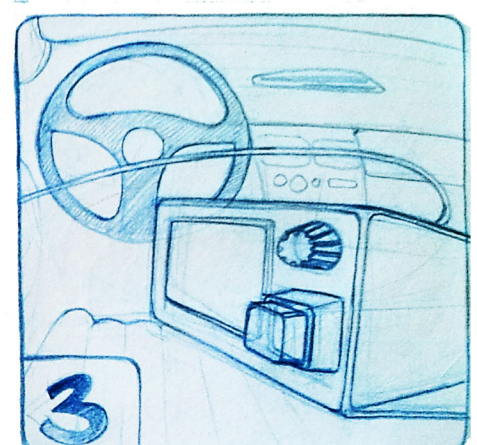

THE FUSE BOX. RUN THE DISPLAY WIRE INTO THE VEHICLE INTERIOR & MOUNT THE DISPLAY CASE

mount display and run cable to PeteWM connect the trigger wire to an ignition fuse inside the cap.